


E31 Convection Oven

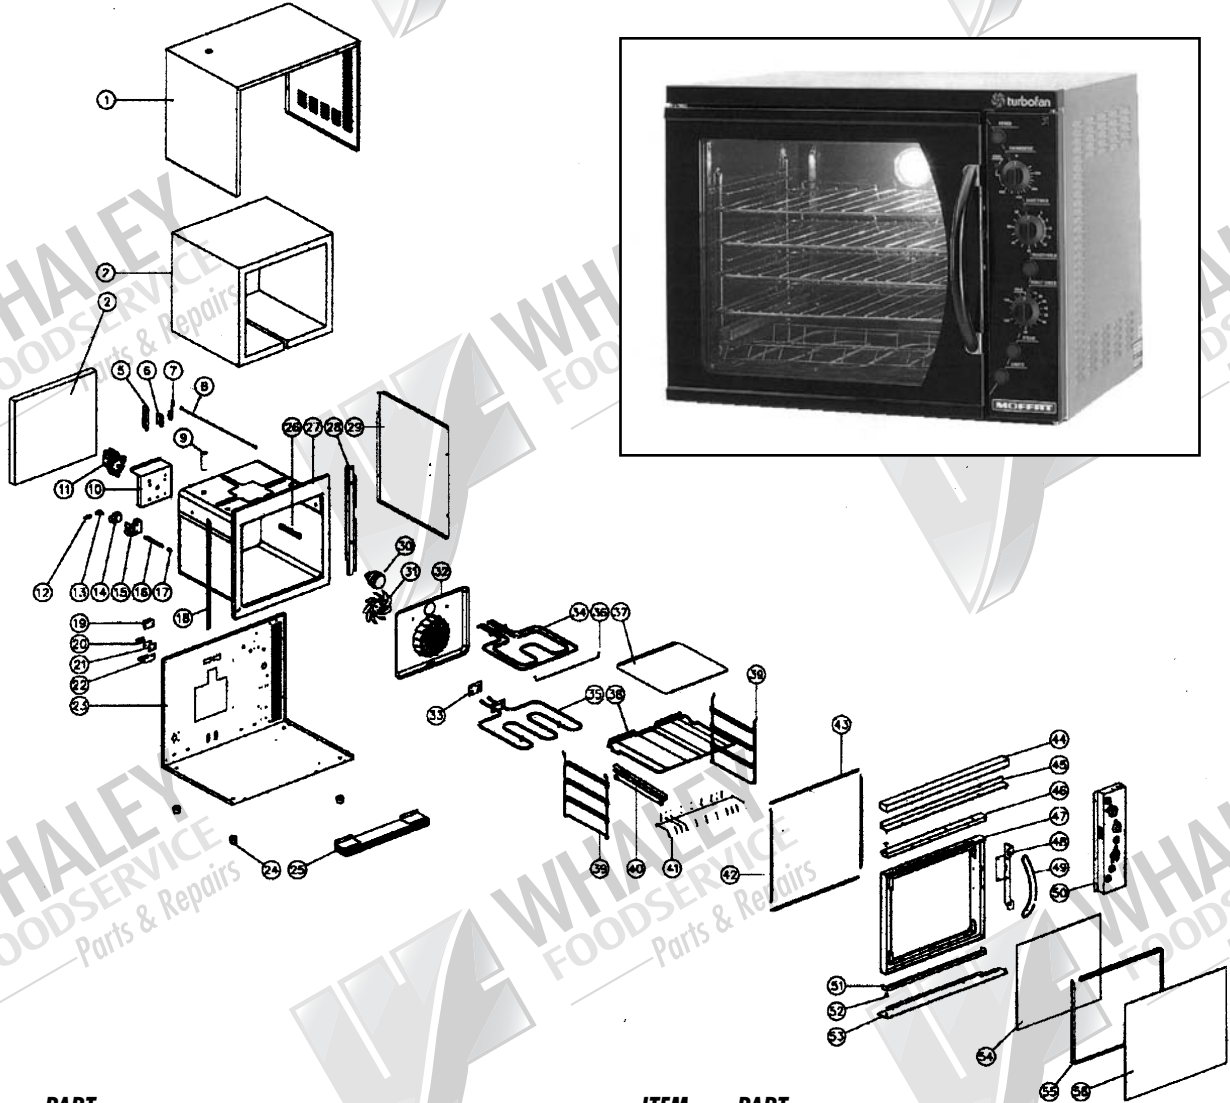

ITEM NO.	PART NO.	DESCRIPTION
1	021533	Wrapper
2	090406	Insulation
	013011	Cover Panel
	013012	Cover Panel Plate
5	011412	Microswitch Bracket
6	011389	Microswitch Insulator
7	002990	Microswitch
8	003012	Actuator Rod
9	011414	Vent Tube
10	003016	Motor Mounting Plate
11	013431	Motor

ITEM NO.	PART NO.	DESCRIPTION
12	012782	Hose Connector
13	011634	Elbow
14	012781	Solenoid Valve
15	019208	Solenoid Mounting Bracket
16	012784	Solenoid Extension
17	012785	Injector
18	011404	LH Oven Support
19	013586	Terminal Block
20	002138	Cable Clamp
21	002441	Insulator
22	018251	Cable Entry Clamp Bracket

ITEM NO.	PART NO.	DESCRIPTION
23	013053	Body
24	013048	Leg - 4"
25	013908	Foot Assembly - 1"
26	017770	Phial Guard
27	004004	Oven Inner
28	011413	RH Oven Support
29	011407	Side Insulation Panel
30	013520	Oven Light Assembly
	003434	Silk Gasket
	013521	Lamp 40 Watt
	003002	Light Glass
31	013432	Fan
32	004005	Fan Baffle
33	003123	Baffle Bracket
34	003113	Top Element 208 - 220V
	011604	Top Element 230 - 240V
35	003074	Bottom Element 230 - 240V
	003114	Bottom Element 208 - 220V
36	003219	Element Support
38	012809	Oven Rack
39	012798	Oven Side Rack
40	012787	Water Trough
41	003057	Bottom Element Guard
42	014225	Oven Seal Assembly - Vertical
	003028	Vertical Seal - 455mm
43	014226	Oven Seal Assembly - Horizontal
	003038	Horizontal Seal - 508mm
44	004731	Pivot Cover - Top
45	011422	Pivot Support - Top Assembly
46	021528	Top Trim
47	004006	Door Inner
48	021465	Handle Bracket (Handle Assembly 021469)
49	021468	Handle (Handle Assembly 021469)
50	Please Call	Control Assembly
51	021530	Bottom Trim
52	013610	Door Bush (Also Used on Control Panel Pivot)
53	011424	Pivot Support - Bottom Assembly
54	002340	Door Inner Glass
	090200	Silicon Extrusion - 1.74 M
55	004452	Door Glass Clamp Angle

ITEM NO.	PART NO.	DESCRIPTION
Controls		
56	021444	Door Outer Glass
	090225	Silicon Extrusion -0.96M
	021473	Switch - Power
	017121	Thermostat
	020823	Knob - Thermostat/Bake Timer
	020849	Neon Indicator
	011760	Bake Timer
	011794	Buzzer
	021476	Switch - 'Roast n Hold'
	011419	'Roast n Hold' Timer
	021472	'Roast n Hold' Timer Knob
	021474	Switch - Steam / Light
	022281	Relay
	018223	Hold Thermostat
	002990	Microswitch
	003002	Oven Lamp Glass
	003434	Silk Gasket
	013521	Oven Lamp - 40 Watt Min. Edison Screw
Motor & Elements		
	003113	Oven Top Element 208V
	003114	Oven Bottom Element 208V
	011604	Oven Top Element 240V
	003074	Oven Bottom Element 240V
	013431	Fan Motor
	013432	Oven Fan
Steam System		
	012781	Water Solenoid
Door		
	014225	Oven Door Seal Strip Side
	014226	Oven Door Seal Strip Top / Bottom
	021469	Handle Assembly
	021468	Handle
	021465	Handle Bracket
	021444	Door Outer Glass
	002340	Door Inner Glass
	011005	Door Catch
	013610	Door Bush
Racks		
	003382	Oven Side Rack
	012809	Oven Rack